




WHISTLERGRILLS



**Side Burner Cabinet(WMK-SBC-WHITE & GREY)**



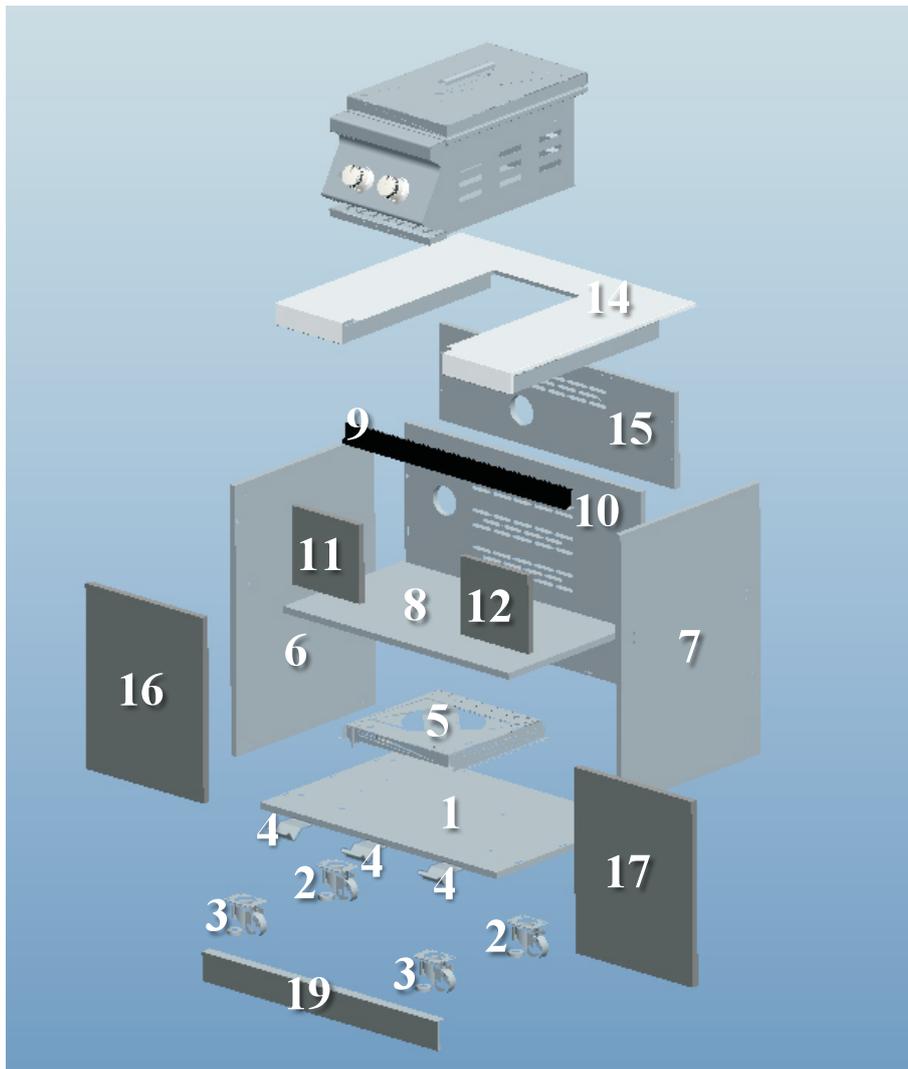

Frame Assembly Insturation - Side Burner Cabinet Frame

Parts No.	Item	Qty
1	Bottom Panel	1
2	Wheels w/ Lock	2
3	Wheels	2
4	Plate Clips	3
5	Cylinder Stand	1
6	Left Side Panel	1
7	Right Side Panel	1
8	Top Panel	1
9	L-Shaped Bar	1
10	Lower Back Panel	1
11	Front Left Panel	1
12	Front Right Panel	1
13	Panel Connector	6
14	Countertop	1
15	Upper Back Panel	1
16	Left Door	1
17	Right Door	1
18	Door Hinge	4
19	Skirting Board	1

Parts Pack	Item	Qty
B1	Screw M6*15	16
	Flat Washer ø6.4	16
	Spring Washer ø6	16
B2	3 in 1 (Set)	14
B3	Screw M4*10	42
B4	Screw M4*25	8
B5	Screw M4*16	8
B6	Screw M5*36	4



## WARNING






**CALIFORNIA PROPOSITION 65 WARNING:** This product can expose you to chemicals including Chromium (hexavalent compounds), which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)



Do not use power tools to assemble. Only use hand tools, as power tools can damage or loosen the nutsert.

Step 1

# Bottom Panel

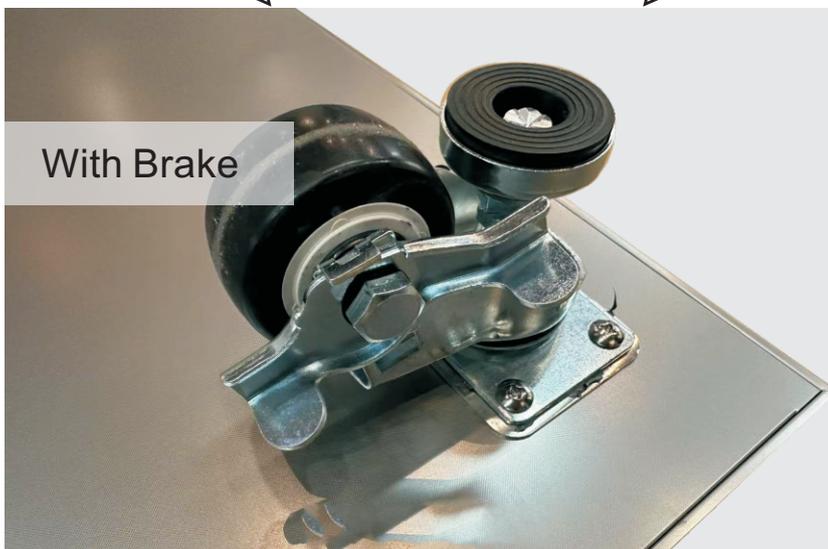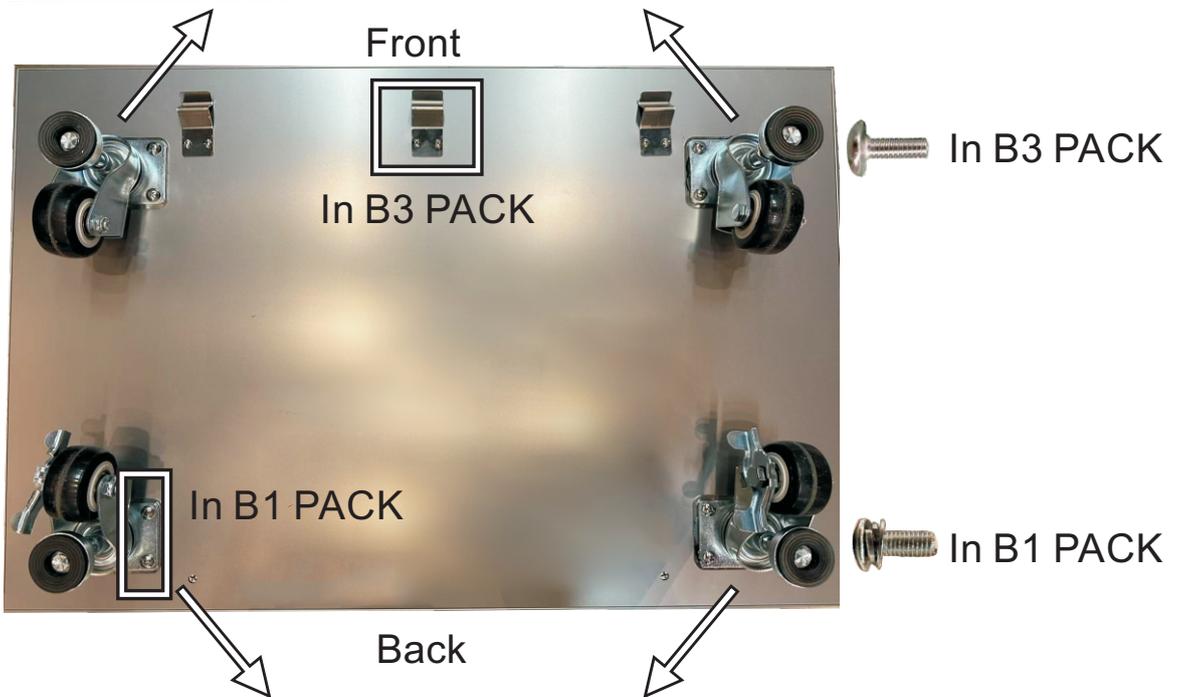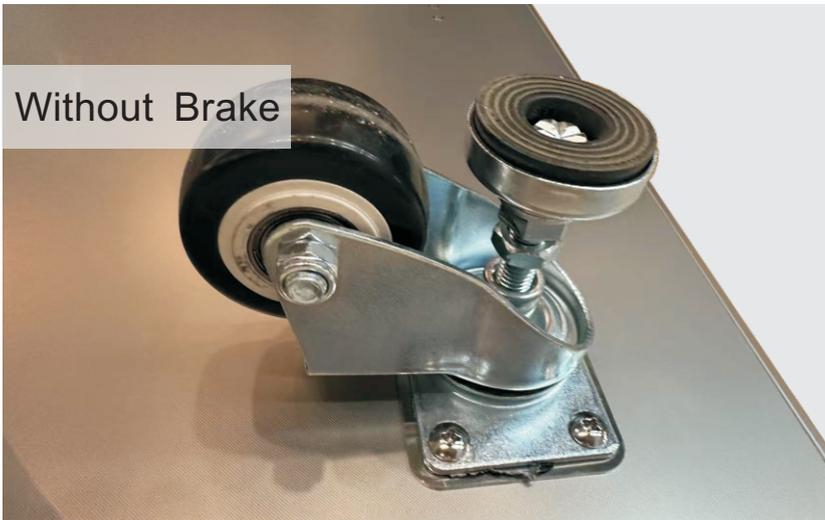

## Step 2

Adjust the leveling feet to sit flush with the wheel.  
Before moving to next step



## Step 3

Top of the Bottom Panel



In B2 PACK




**Step 4**

**Propane Holder**




In B2 PACK

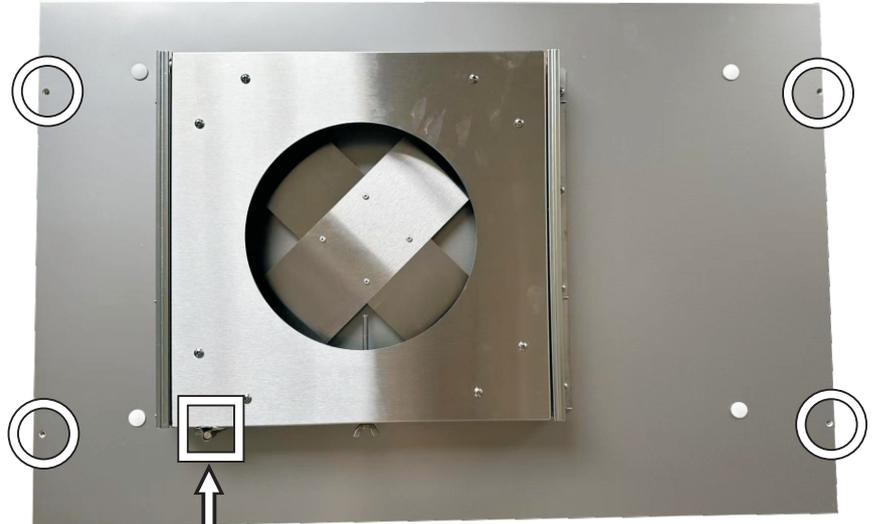

Front

Lock


**Step 5**

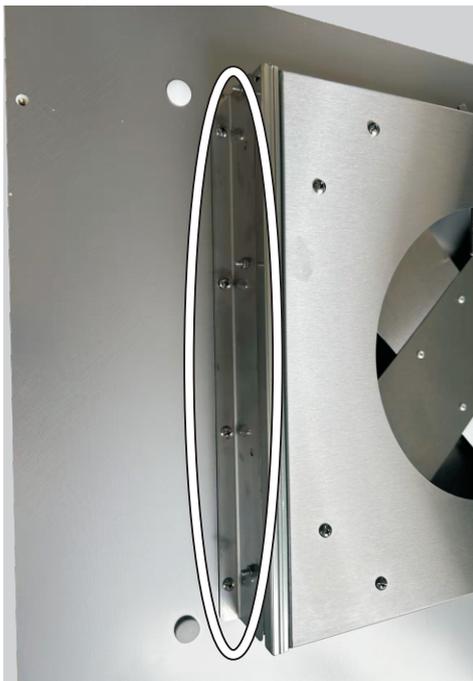

 In B3 PACK


**Step 6**

**Side Panel**

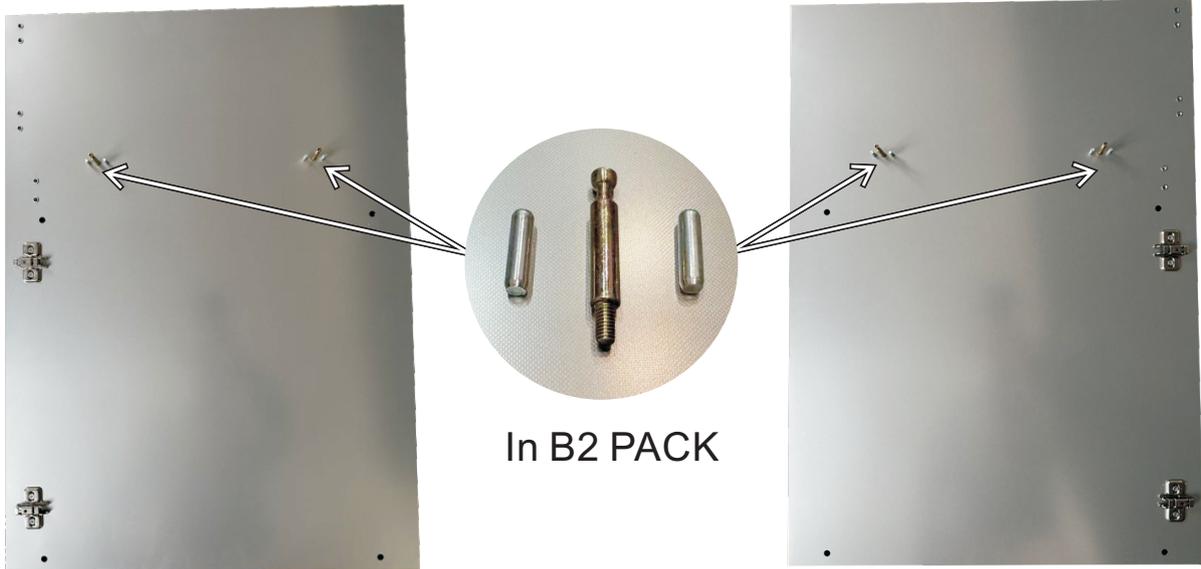

**Step 7**


**Top Panel**

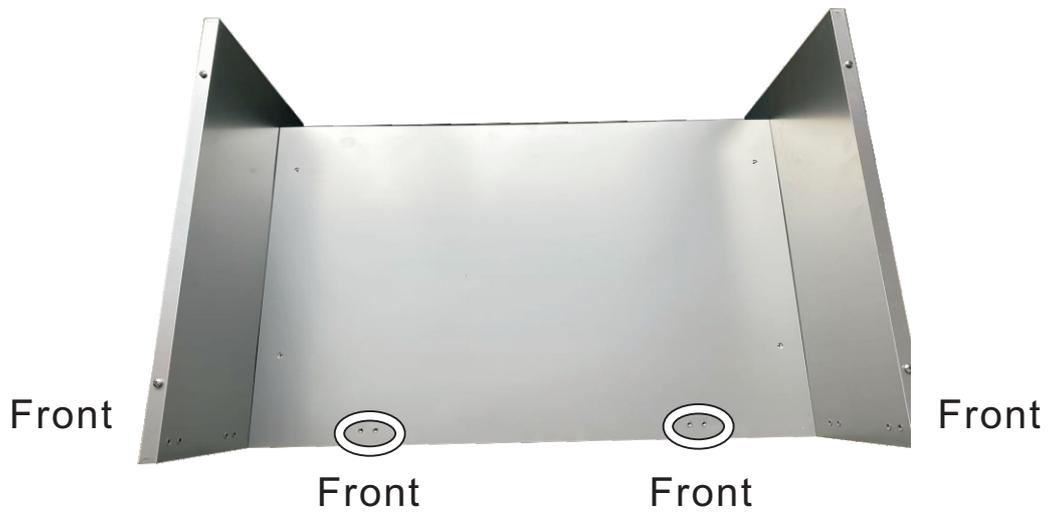

## Step 8



Repeat this on the other side panel

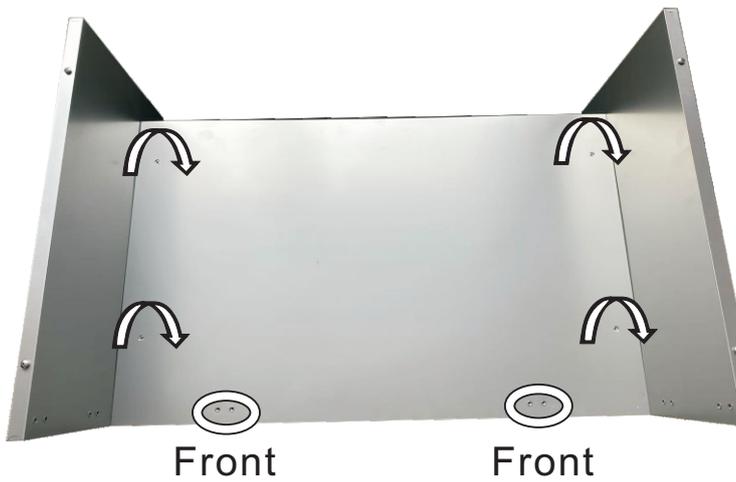

## Step 9

### Back Bottom Panel

In B2 PACK



These screws are inside the burner's package.

## Step 10



## Step 11

### Front Panel



## Step 12



Make sure the top and side of the front panel flush with the side panel

## Step 13

### Counter Top



This is not the countertop of the side burner cabinet.  
Just an example to showcase the holes



## Step 14

Put the countertop on the side panel carefully



## Step 15



Push the countertop to the right.



Step 16

## Back Bottom Panel



Step 17

## Handlebar



 In B3 PACK


## Step 18



- Place the side burner halfway on the countertop.
- Ensure the regulator passes through the hole, and the lighting wire runs behind the top panel. (Note: The regulator is not provided.)
- Push the side burner all the way back into position.

## Step 19

Connect the lighting wire to the transformer. ▶

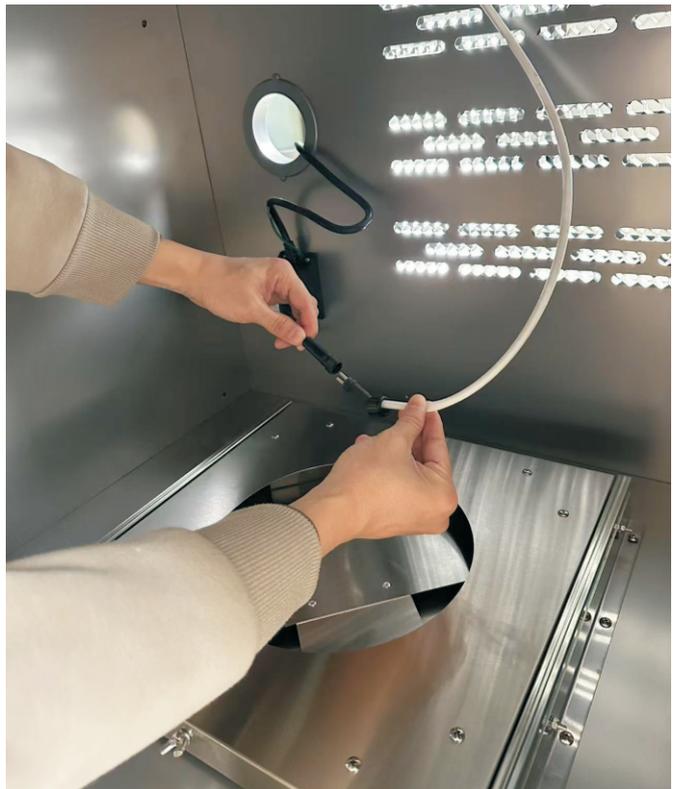


## Step 20

### Place the Propane on the Propane Holder




- Place the propane tank onto the propane holder, then secure it with the pin.
- Push the propane holder into the cabinet and lock it for safety.
- Connect the regulator to the propane tank.

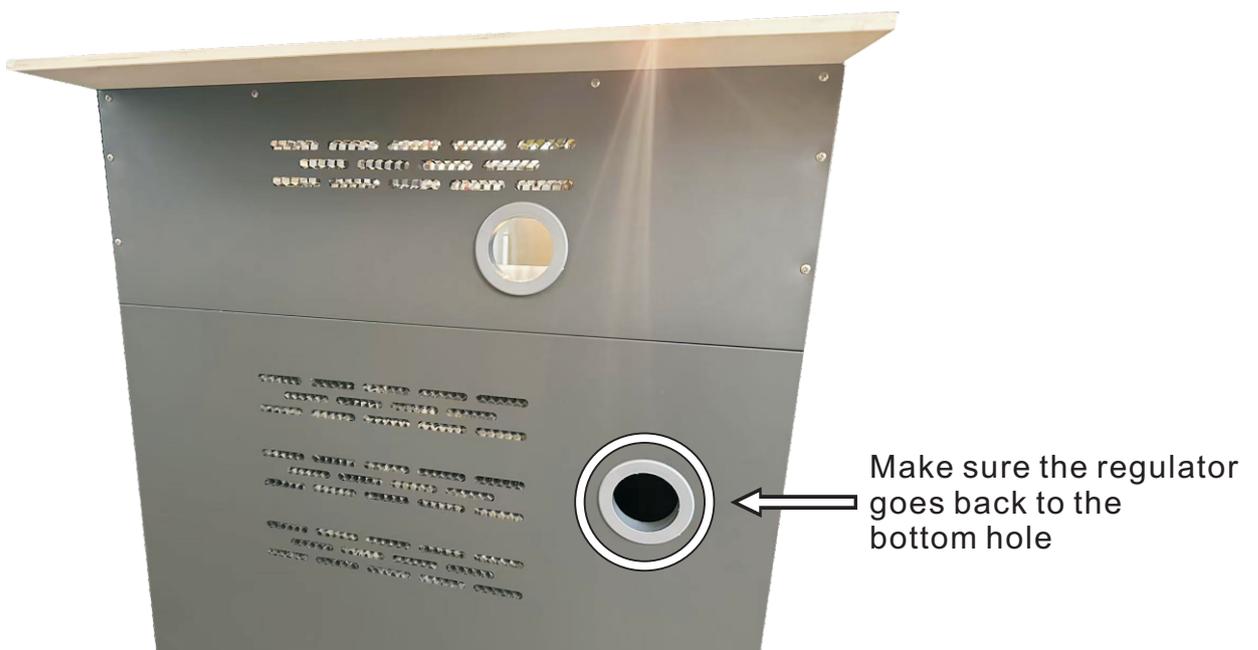

Step 21

## Attach the hinges to the door

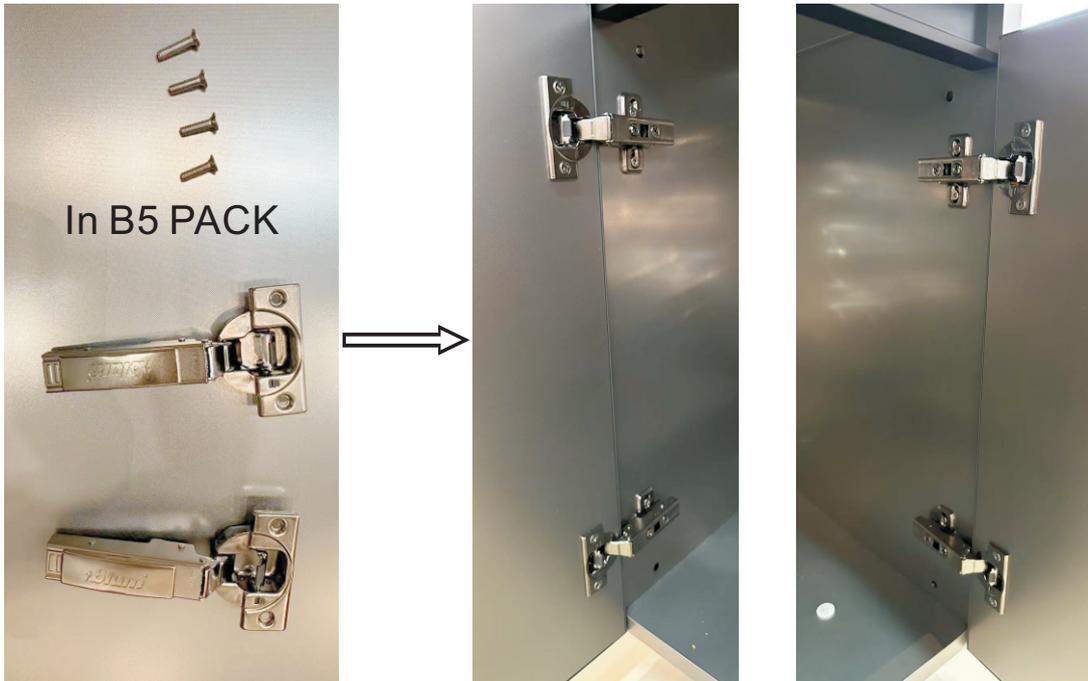

Step 22

